


AMS HANGING DISPLAY INSTALLATION SHEET



(352) 351-3511

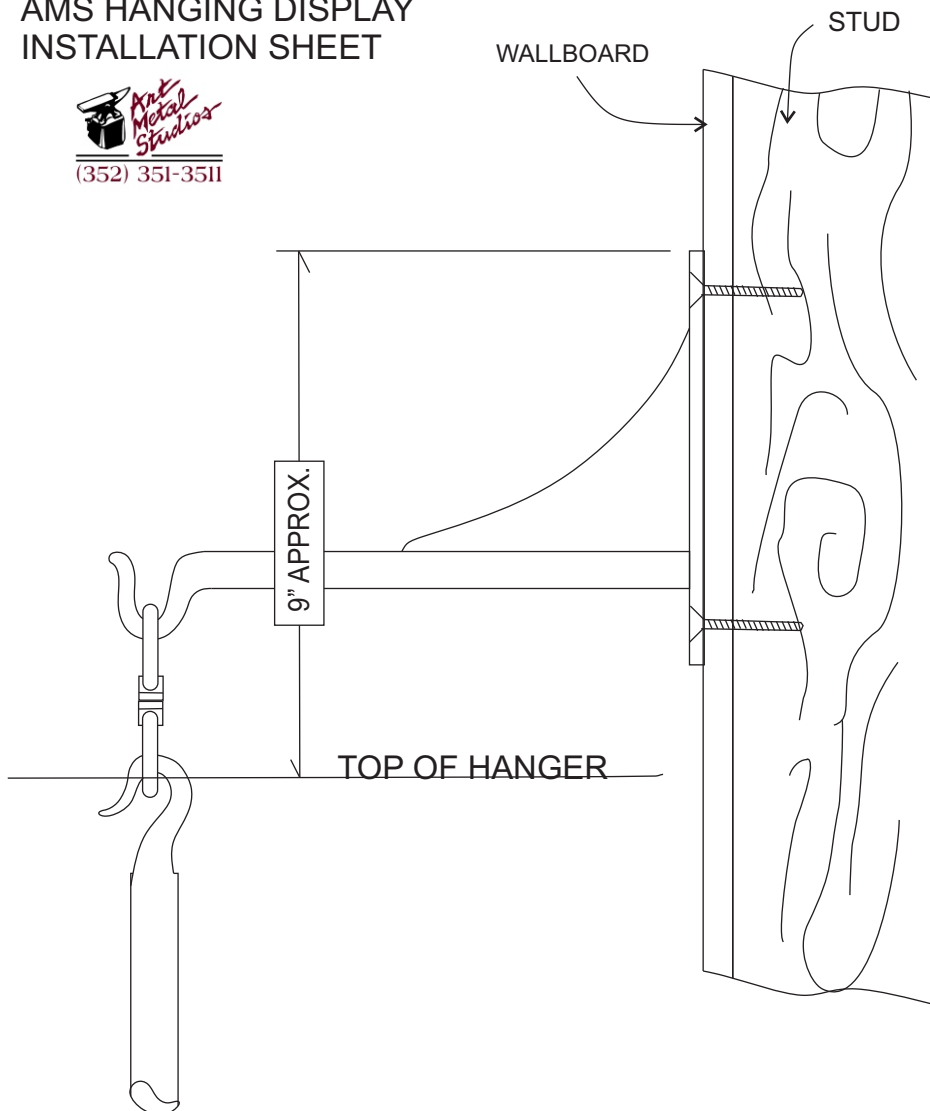

BEFORE INSTALLATION YOU WILL NEED:

ELECTRIC DRILL/DRIVER AND 3/16" WOOD OR MASONRY BIT
SMALL LEVEL AND PHILLIPS DRIVER BIT TO FIT SCREWS
(A LENGTH OF 6" OR GREATER FOR DRIVER BIT ALLOWS FOR EASE OF THE INSTALLATION)

TO INSTALL BRACKET:

LOCATE STUD (IF MASONRY WALL, USE CONCRETE SCREWS)
DRILL 3/16" PILOT HOLE ON CENTERLINE OF STUD AND 8 3/4" ABOVE DESIRED TOP OF HANGER LOCATION
DRIVE TOP SCREW THRU BRACKET INTO HOLE, LEAVING SLIGHTLY LOOSE
PLUMB THE BRACKET, MARK BOTTOM HOLE, DRILL AND DRIVE SECOND SCREW
MAKE SURE THAT BOTH SCREWS ARE TIGHT, AND YOU ARE READY TO HANG AND USE YOUR WINE DISPLAY